

Care & Maintenance





Recommended maintenance equipment for indoor is shown as follows:

- Sweepers.
- One auto-scrubber.
- Normal equipment, (brooms, pails, etc.)

Like any other floor, basic, regular maintenance should be performed on the surface. Sweeping the surface on a daily basis will minimize dirt build up. High traffic areas may have to be swept more often; however, the entire surface should be swept at least once weekly.

The surface also requires regular washing. The frequency of washing depends on traffic, the number of programs and special events on the surface. It is recommended that the entire surface be washed on a regular basis.

The detergent must be of a mild non-phosphate type with a neutral pH such as Taski Profi from Diversely-Lever. The procedure and equipment to be used will be as follows:

- A- Prior to washing, vacuum all debris and loose dirt from the floor. Then, wash the floor with the recommended detergent diluted in warm water at a ratio recommended by the manufacturer.
- B- The use of an auto-scrubber equipped with soft nylon brushes is recommended. Scrub the area thoroughly in multiple directions. Do not use the vacuum immediately.
- C- Allow the solution to stand approximately 10 minutes. With the use of an auto scrubber, pass over the washed area and vacuum up the solution and allow floor to dry. If the floor is very dirty, the detergent ratio should be increased and let the solution stand for 15 minutes to allow the detergent to loosen the dirt.
- D- Rinse the floor thoroughly with clean fresh water. Repeat rinsing as required to remove all residues. Note: The appearance of a white film following washing and rinsing is an indication that the rinsing procedure was not adequate, in such cases, repeat the rinsing procedure until the residue has been removed.